
# Gutter Trim Internal Corners Install Guide



# What good looks like

Installed correctly, Gutter Trim Internal Corners deliver a smart finish and longterm protection from the elements.

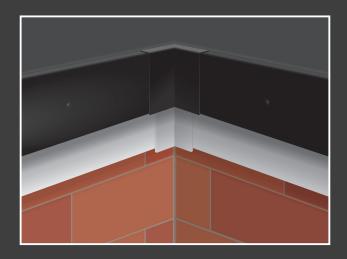

Integra Trim components are designed and manufactured for quick and easy installation.

In this guide, you'll learn how to prepare your project site and correctly install each Integra Trim component.

# How to install Integra Trim Gutter Trim Internal Corners

Follow the steps in this guide to correctly use corner components to join two lengths of Integra Trim Gutter Trim where they meet on an internal right angle.

#### Preparing for flat roof success

Ensure the Integra Trim Gutter Trim Internal Corner components to be installed are clean, dry and free from dust and contaminants. Make sure to have the correct (and required quantities of) materials and tools, as listed below.

#### **Materials required**

- Integra Trim Gutter Trim Internal Corners
- Superglue
- uPVC superglue activator



Top Tips...

Make sure to leave a 4mm gap between the two lengths of Gutter Trim to be joined - this allows for any expansion of the lengths of Gutter Trim.



## Contact : 01306 400801 flexiproof.co.uk

No tools required

# Step by step instructions to install **Gutter Trim Internal Corners**



## Step 1

Step 2

Create an effective corner (ready for Gutter Trim Internal Corners to be fitted) by butt-joining two lengths of Integra Trim Gutter Trim where they meet at an internal right angle.

Apply superglue to ONE inside edge of the Gutter


expansion of the joined lengths of Raised Kerb Trim.)

(Only one side is superglued to allow for any

Trim Internal Corner component.

Make sure to leave an 4mm expansion gap.




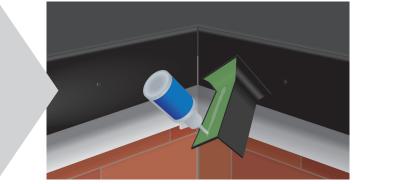



### Step 3


Apply uPVC superglue activator to the Gutter Trim corner area where the superglued inside edge of the Internal Corner component is to be affixed.

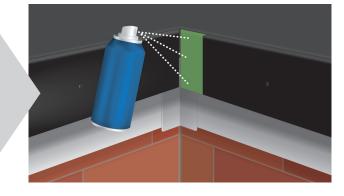



### Step 4

Firmly press the Internal Corner component down and into the Gutter Trim butt-joined corner and hold in place until adhesion is solid.

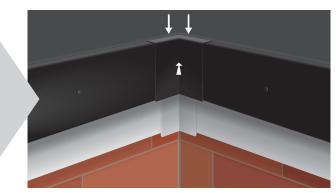



Contact : 01306 400801 E: info@flexiproof.co.uk W: flexiproof.co.uk

FlexiProof Flat Roof Systems, Rugge Farm, Horsham Road, Beare Green, Dorking RH5 4PT